Parts Manual for

SNAPPER®

VACUUM-CHIPPER-BAGGER
SERIES 0

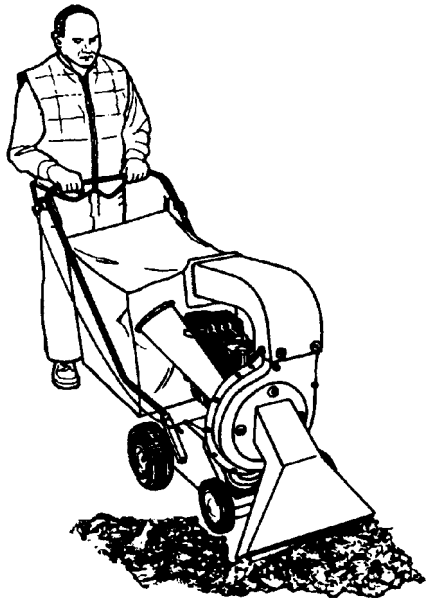

MODEL
SVCB258

PARTS FOR THIS MACHINE MUST BE ORDERED FROM:
1189 Old Schuylkill Road * P.O. Box 111 * Parker Ford, PA 19457-0111
Phone: (610) 495-7181 or (800) 348-1117, Fax: (610) 495-5951

SNAPPER® McDonough, GA., 30253 U.S.A.

COPYRIGHT © 1999
SNAPPER INC.
ALL RIGHTS RESERVED

MANUAL No. 0-6169 (I.R. 08/02/99)

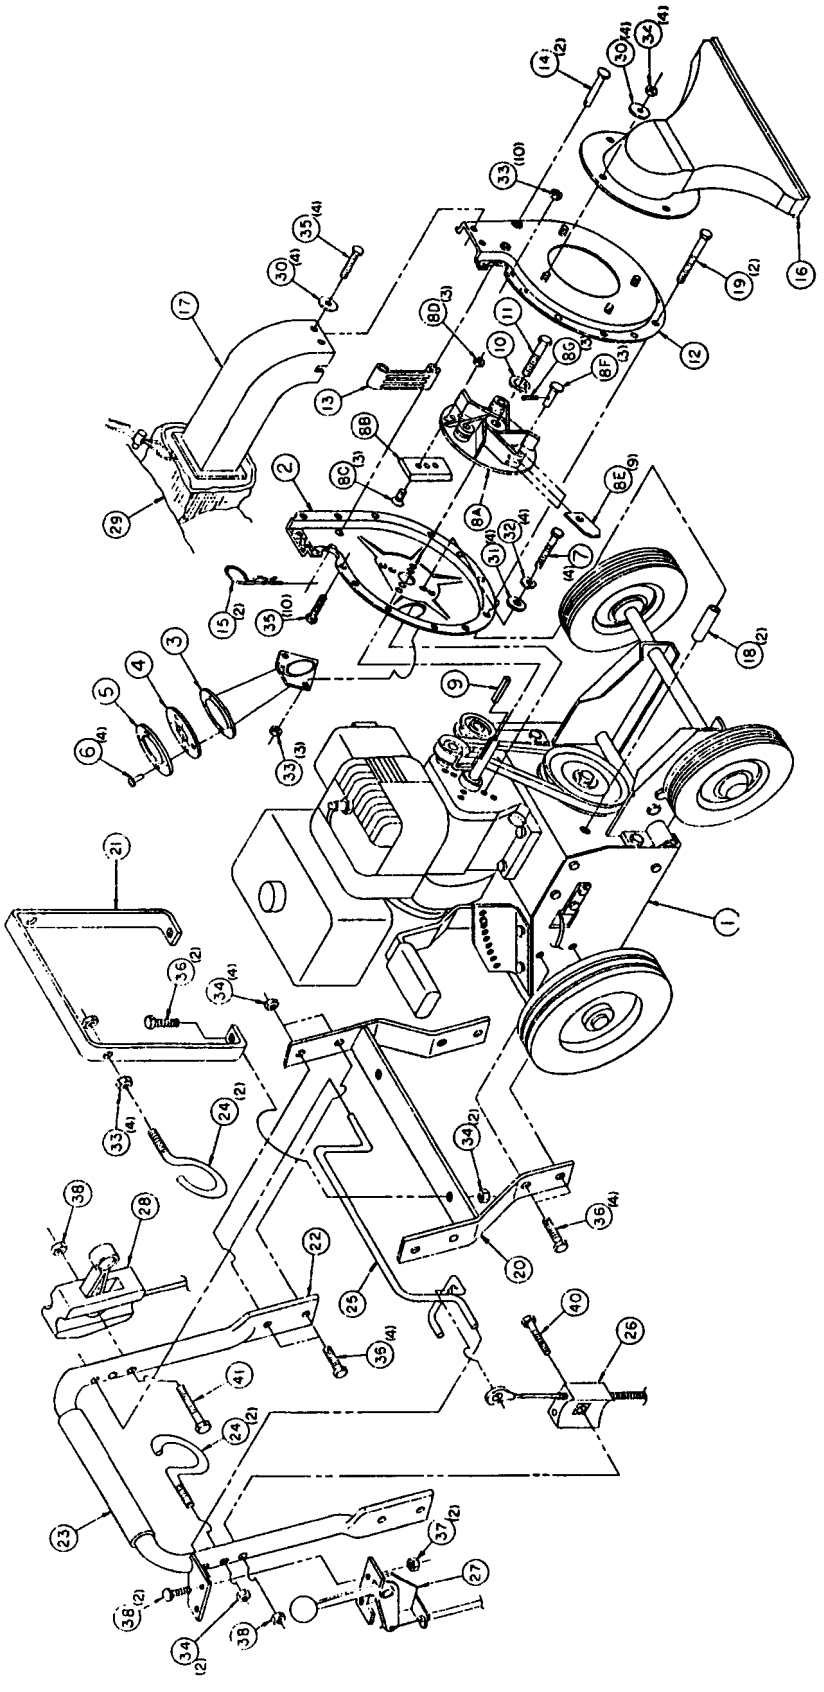

Item No.	Part No.	Qty.	Description
1	805-0100	1	Drive Train Assembly
2	805-0079-RD	1	Engine Housing
3	805-0090-RD	1	Chipper Tube Weldment
4	804-0033	1	Chipper Chute Cover
5	804-0031P-RD	1	Mounting Flange
6	080-0061	4	3/16" x .402 Pop Rivet
7	090-0505	3	5/16-24 x 2-1/4" HHCS, GR5, Pltd.
8	805-0088	1	Shredder Plate Assembly (includes A through G)
8A	805-0012	1	Shredder Plate Weldment
8B	805-0093	1	Knife
8C	090-0413	3	5/16-18 x 1" Flat Hd. Soc. Cap Screw
8D	090-0460	3	5/16-18 Nylok Locknut
8E	805-0043	9	Hammer
8F	804-0019	3	Hammer Rod
8G	090-0454	3	1/8" Dia. x 1" Lg. Roll Pin
9	703-0424	1	1/4" x 1/4" Shaft Key
10	090-0228	1	3/8" Med. Split Lockwasher
11	090-0509	1	3/8-24 x 2-1/4" HHCS, GR8, Blk.
12	804-0005-RD	1	Inlet Housing
13	804-0023	1	Shredder Screen
14	804-0024	2	Screen Rod
15	706-0924	2	1/8" Hair Cotter Pin
16	805-0096	1	Snout
17	805-0131	1	Discharge Tube
18	805-0092	2	Lower Housing Mounting Spacer
19	090-0381	2	5/16-18 x 5-1/2" HHCS, GR5, Pltd.
20	805-0114	1	Lower Handle Weldment
21	805-0120	1	Bag Hanger Frame
22	805-0130	1	Upper Handle Bar
23	705-0002	1	Handle Bar Grip
24	805-0119	4	Bag Hanger Eyebolt
25	805-0035	1	Bail
26	805-0101	1	Clutch Cable Assembly
27	805-0017	1	Shift Cable
28	805-0099	1	Throttle Cable
29	805-0014	1	Collection Bag
30	090-0502	8	5/16 Fender Washer
31	090-0233	4	5/16" Flatwasher, Pltd.
32	090-0394	4	5/16" Med. Split Lockwasher, Pltd.
33	090-0418	17	5/16-18 Whiz Locknut, Pltd.
34	090-0460	16	5/16-18 Nylok Locknut, Pltd.
35	090-0067	14	5/16-18 x 5/8" HHCS, GR5, Pltd.
36	090-0088	10	5/16-18 x 1, HHCS, GR5, Pltd.
37	090-0453	2	1/4-20 Whiz Locknut, Pltd.
38	090-0470	2	1/4-20 Nylok Locknut, Pltd.
39	090-0003	2	1/4-20 x 5/8" Rd. Hd. Mach. Screw, GR5, Pltd.
40	090-0013	1	1/4-20 x 1-3/4" HHCS, GR5, Pltd.
41	090-0405	1	1/4-20 x 2-1/4" HHCS, GR5, Pltd.

NOTE: Item #13, #14, and #15 are now optional items and must be ordered separately.

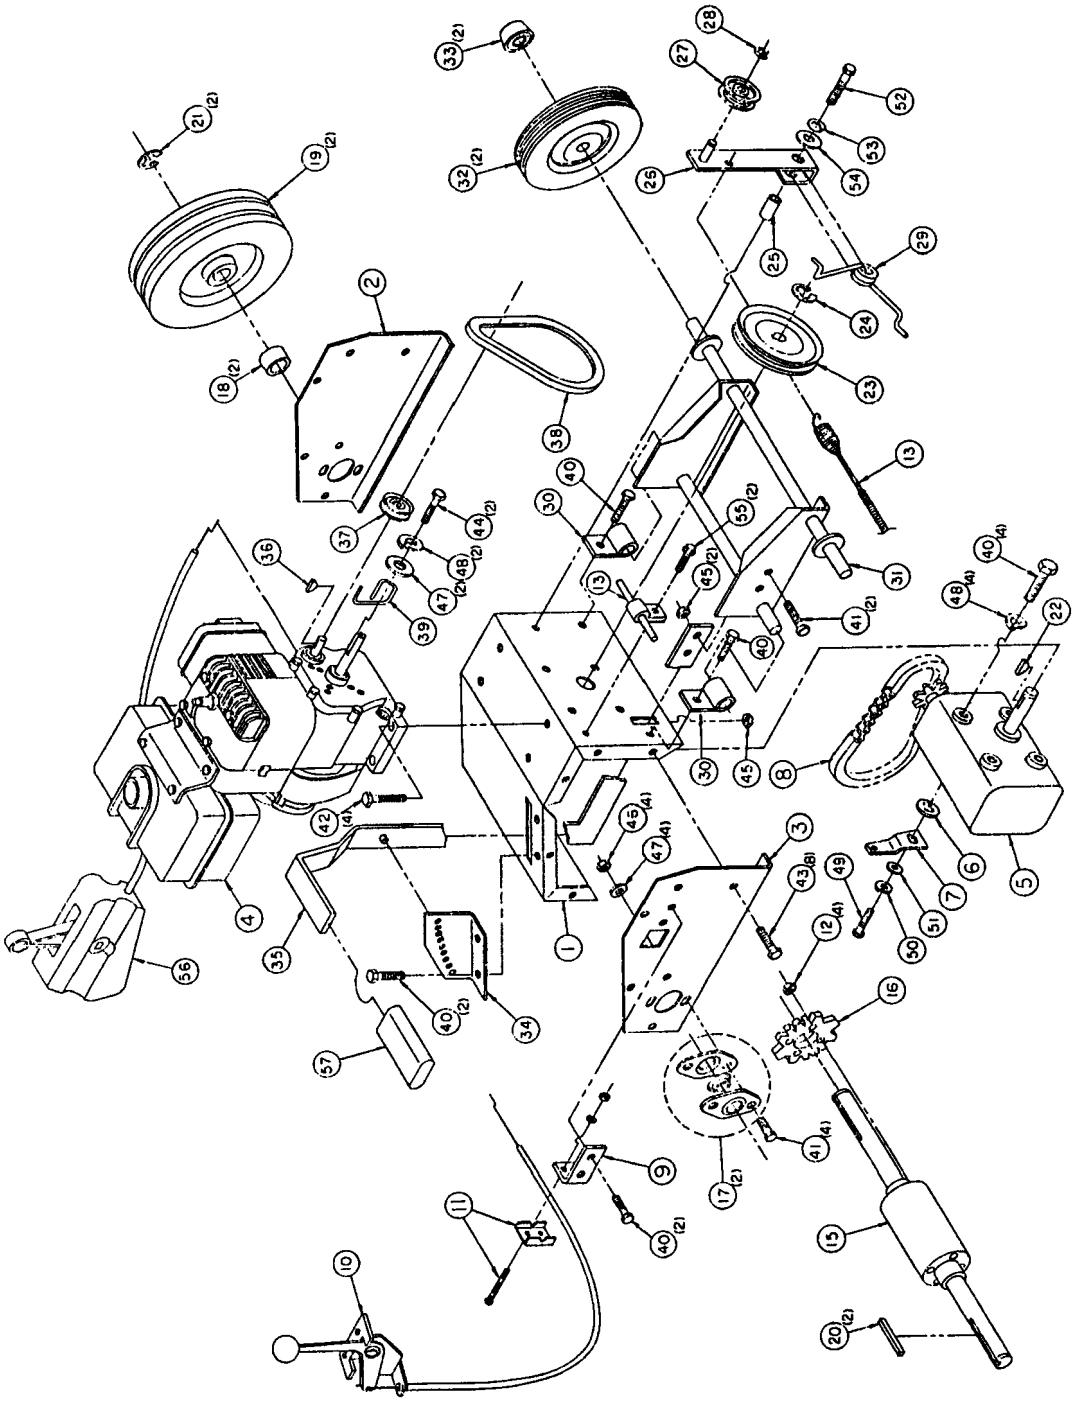

Item No.	Part No.	Qty.	Description
1	805-0122	1	Engine Base Weldment
2	805-0102	1	Left Side Weldment
3	805-0104	1	Right Side Weldment
4	805-0002	1	Engine
5	805-0003	1	Transmission
6	805-0065	1	Washer Shift Lever
7	805-0127	1	Shift Lever
8	805-0061	1	#40 Chain .5 Pitch x 24"
9	805-0117	1	Shift Cable Bracket
10	805-0017	1	Shift Cable
11	805-0118	1	Clamp Assembly
12	805-0121	1	Bottom Cover
13	805-0101	1	Clutch Cable Assembly
14	090-0048	4	5/16-18 Gripco Locknut Pltd.
15	805-0042	1	Differential
16	805-0046	1	Sprocket
17	030-0174	2	2 Hole Flange Bearing
18	805-0052	2	Wheel Spacer
19	805-0006	2	Pneumatic Wheel
20	703-0505	2	3/16" x 3/16" x 1-1/2" Shaft Key
21	090-0495	2	3/4" Dia. E-Ring
22	090-0493	1	#606 Woodruff Key
23	030-0175	1	Transmission Pulley
24	090-0494	1	5/8" Dia. E-Ring
25	805-0023	1	Spacer
26	805-0020	1	Idler Arm
27	030-0177	1	Idler Pulley
28	090-0497	1	3/8" Dia. E-Ring
29	805-0064	1	Idler Spring
30	805-0111	2	Pivot Mount
31	805-0106	1	Wheel Frame
32	701-0052	2	Wheel
33	090-0457	2	Push Nut Cap
34	805-0113	1	Height Adjuster Plate
35	805-0112	1	Height Adjuster Handle
36	090-0496	1	#405 Woodruff Key
37	030-0176	1	Engine Pulley
38	030-0178	1	V-Belt
39	805-0039	1	Belt Guide
40	090-0066	10	5/16-18 x 3/4" HHCS Pltd.
41	090-0088	6	5/16-18 x 1" HHCS Pltd.
42	090-0089	4	5/16-28 x 1-1/4" Pltd.
43	090-0503	8	5/16-18 x 3/4" Self-Tapping Cap Screw Pltd.
44	090-0408	2	5/16-24 x 3/4" HHCS Pltd.
45	090-0418	6	5/16-18 Whiz Locknut Pltd.
46	090-0460	4	5/16-18 Nylok Locknut Pltd.
47	090-0233	6	5/16" Flatwasher Pltd.
48	090-0394	6	5/16" Med. Split Lockwasher Pltd.
49	090-0427	1	1/4-28 x 3/4" HHCS Pltd.
50	090-0378	1	1/4" Med. Split Lockwasher Pltd.
51	090-0232	1	1/4" Flatwasher Pltd.
52	090-0113	1	3/8-16 x 1-3/4" HHCS Pltd.
53	090-0228	1	3/8" Med. Split Lockwasher Pltd.
54	090-0234	1	3/8" Flatwasher Pltd.
55	090-0504	2	10-24 x 1/2" Self-Tapping Cap Screw
56	805-0099	1	Throttle Cable
57	500-0045	1	Grip-Height Adjuster

⚠ CAUTION ⚠
(1) READ OPERATING INSRUCTIONS THOROUGHLY BEFORE USING.
(2) DANGER: Rotating parts, keep hands, feet, and clothing out of openings at all times and especially while machine is running.
(3) NEVER operate with the protective cover removed
(4) NEVER direct the discharge with the bag removed towards any persons, children, or animals.
(5) Stop engine and disconnect spark plug wire before attempting to clean intake or discharge
(6) Do not use this machine for any purpose other than that for which intended.

091-0058

091-0059

Parts Manual for

SNAPPER®

SVCB258 VACUUM-CHIPPER-BAGGER
SERIES 0

091-0156

080-0970

091-0062

091-0055

⚠ CAUTION ⚠
(1) READ INSTRUCTIONS AND OPERATOR'S MANUAL THOROUGHLY BEFORE STARTING MACHINE.
(2) REMOVE SPARK PLUG WIRE BEFORE ATTEMPTING ANY SERVICE OR REPAIRS ON MACHINE.
(3) KEEP HANDS, FACE, LOOSE CLOTHING, CHILDREN AND PETS AWAY FROM DISCHARGE AREA, INTAKE HOPPER AND MOVING PARTS OF SHREDDER.
(4) USE GLOVES, HEARING PROTECTORS, AND SAFETY GLASSES WHEN OPERATING.
(5) DO NOT ALLOW CHILDREN TO OPERATE THIS MACHINE. KEEP BYSTANDERS AWAY WHILE MACHINE IS RUNNING.
(6) NEVER RUN THIS MACHINE IN AN ENCLOSED AREA. CARBON MONOXIDE FUMES ARE DEADLY.
(7) DO NOT INSERT HANDS OR METAL OBJECTS INTO THE FEED HOPPER OR DISCHARGE CHUTE WHEN THE MACHINE IS RUNNING. IF JAMMED, TURN ENGINE OFF AND REMOVE SPARK PLUG WIRE BEFORE CLEANING THE OBSTRUCTION WITH A WOODEN STICK.
(8) DO NOT USE HANDS TO CLEAR MATERIAL FROM THE DISCHARGE AREA.

091-0157

091-0158

COPYRIGHT © 1999
SNAPPER INC.
ALL RIGHTS RESERVED

SNAPPER® McDonough, GA., 30253 U.S.A.

MANUAL No. 0-6169 (I.R. 08/02/99)

Printed in U.S.A.